



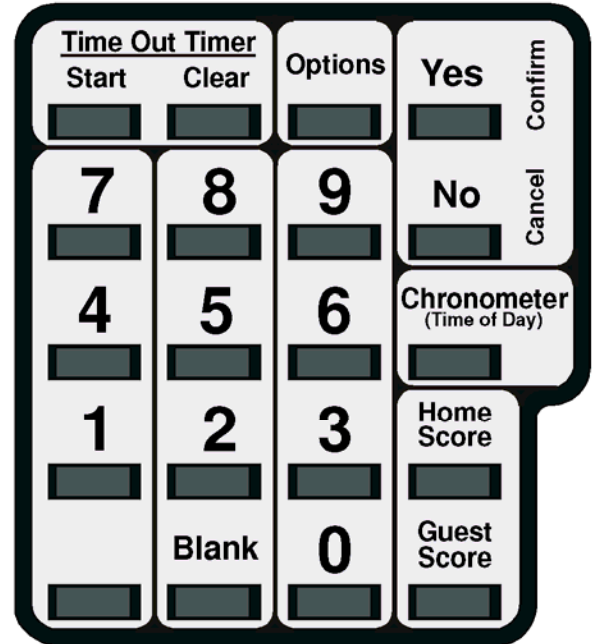

Model Code 871
Hockey

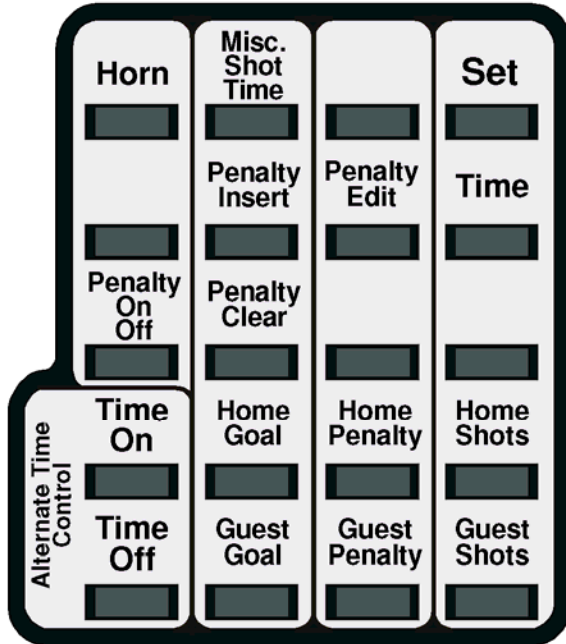

TO START A NEW GAME

1. Turn timeclock on (button on right side of unit). If timeclock is already on, turn unit off then on.
2. *PROMPT: START WHERE TURNED OFF LAST?*
3. Press key.
4. *PROMPT: GO TO A BOOKMARK?*
5. Press key.
6. *PROMPT: ENTER YOUR MODEL CODE*
7. Enter 871, using numbers keys. DO **NOT** PRESS YES.
8. The word "Hockey" will display briefly.
9. *PROMPT: DO YOU WANT TO OPERATE WIRELESS?*
10. Press key.
11. The phrase "All scoreboards" will display.
12. Press key.
13. *PROMPT: DO YOU WANT TO USE PENALTY TIME OUT?*
14. Press key.
15. The time and direction it will count will display: [0.00.0 DN]



TO SET A NEW PERIOD

1. Press **Set** key.
2. Press **Time** key.
3. *PROMPT: SET MM:SS.s*
4. Enter length of period (i.e. 10:00.0 or 12:00.0 - you need to enter ALL digits, including all zeros).
5. Press **Yes** key.
6. *PROMPT: PERIOD 0*
7. Enter period number, using number keys.
8. Clock is automatically set to count down.
9. Use hand-held switch to start and stop the clock. Top button is timer run toggle and bottom button is manual horn.
10. ****NOTE:** The **Time On** and **Time Off** keys are disabled if hand-held switch is plugged into unit.
11. **IMPORTANT: Turn timer run off at end of period or else the clock will automatically start running after you set the next period!**

TO SET CHRONOMETER (to show time of day clock on scoreboard)

1. Press **Set** key.
2. Press **Chronometer (Time of Day)** key.
3. Answer the following to the prompts, in order:
 - a. YES – Press **Yes** key.
 - b. YES - Press **Yes** key.
 - c. NO - Press **No** key.
 - d. NO - Press **No** key.
 - e. NO - Press **No** key.

TO ENTER A SCORE

1. Press **Home Score** key or **Guest Score** key.
2. The display might prompt [HOME 1+]. In this example, the current Home Score is 1 and the + means 1 will be added to score of 1.
3. Press **Yes** key to accept the increment.



TO EDIT THE SCORE

1. Press **Set** key.
2. Press **Home Score** key or **Guest Score** key.
3. Enter the correct score using number keys (i.e. 2).
4. Press **YES** key.

TO ENTER A PENALTY

1. Press **Set** key.
2. Press **Home Penalty** key or **Guest Penalty** key.
3. *PROMPT: PEN MM:SS*
4. Enter the length of the penalty in minutes. You must enter as 2-digit minutes with zero seconds (i.e. **02:00** for 2 minute penalty)
5. Press **Yes** key.
6. *PROMPT: H.PLAYER# or G.PLAYER#*
7. Enter **2-digit** player number, using number keys (i.e. 09 or [Blank] key & 9 for Player #9)
8. The penalty clock will start once the timer is run.

TO CANCEL A PENALTY

1. Press **Home Penalty** key or **Guest Penalty** key to recall first penalty to control.
2. Each time your press **Home Penalty** key or **Guest Penalty** key, the next penalty on the list will display.
3. Press **Penalty Clear** key.
4. *PROMPT: CLEAR Y-N*
5. Press **YES** key.